



APPENDIX 1

CSP FLAG POLE (4m) WITH UNDERWHEEL BASE AND ADVERTISING FLAG ASSEMBLY INSTRUCTIONS



Assembly instruction


1. Preparation of elements for assembly:

- Unpack and check all items.

Included in the kit:

Package 1 (photo 1):

- 5 × plastic zip ties (4 + 1 spare),
- 1 × bag with load,
- 4 × tubes: bottom - tube No. 1, centre - tube No. 2,
- top - tube No. 3, top - horizontal tube No. 4.

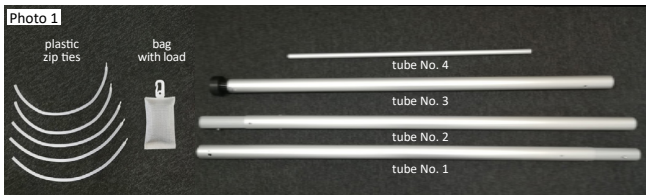


Package 2 (photo 2)

- 1 × underwheel base.




Package 3 (photo 3)

- 1 × advertising flag.

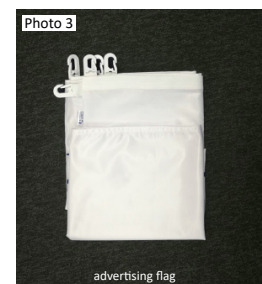

2. Assembling the underwheel base:

- Drive the car's wheel of the car onto the underwheel base (photo 4),

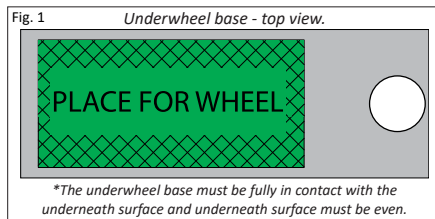

- Unscrew the safety screw in the underwheel base to be able to insert the flagpole into the hole in the base,
- Place tube No. 1 in the underwheel base making sure that the hole


in the bottom of the tube is aligned with the screw in the underwheel base

- Fully tighten the screw (photo 5).




3. Flagpole installation:

- Place tube No. 4 (upper horizontal flagpole frame) in the upper part of tube No. 3.

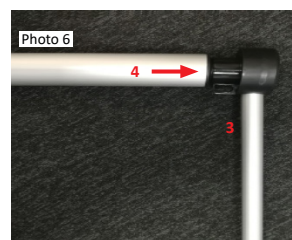

4. Flag assembly:

- Pull the flag tunnel onto tube No. 4,
- Fasten the upper snap hook.

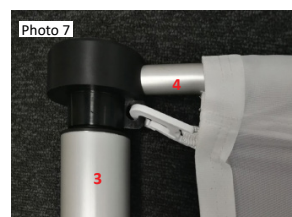

PLEASE NOTE
BE CAREFUL TO AVOID SOILING OF THE FLAG DURING INSTALLATION.



APPENDIX 1


CSP FLAG POLE (4m) WITH UNDERWHEEL BASE AND ADVERTISING FLAG ASSEMBLY INSTRUCTIONS



Assembly instruction

5. Flag assembly:

- Tighten plastic zip ties (photo 8),
- Put plastic zip ties on tube No. 3 and fasten snap hooks found on the flag (photo 9).

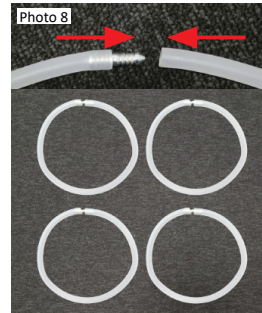

6. Flag assembly:

- Fasten the bag with the load to the last plastic zip tie (photo 10).



7. Flagpole installation:

- Use tube No. 2 to connect the elements already assembled:
- Step 1 - connect tube No. 3 with the flag on it with tube No. 2 (photo 12, 14, 15),
- Step 2 - connect these tubes with tube No. 1 and the underwheel base (photo 13, 14, 15).

